

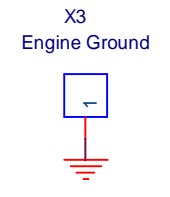


Main fuse amperage value depends on total load and needs to be adjusted based on application

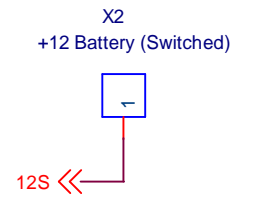

Terminal Block Definition:


- 1 = Injector2
- 2 = Injector2
- 3 = Injector1
- 4 = Injector1
- 5 = Fuel Pmp
- 6 = Fast Ide
- 7 = S1
- 8 = S2
- 9 = S3
- 10 = S4
- 11 = S5
- 12 = Vref
- 13 = TBS
- 14 = TPS Retrn
- 15 = Tach/Igniton
- 16 = Air Temp
- 17 = Air Temp Retrn
- 18 = Coolant
- 19 = Coolant Retrn
- 20 = O2

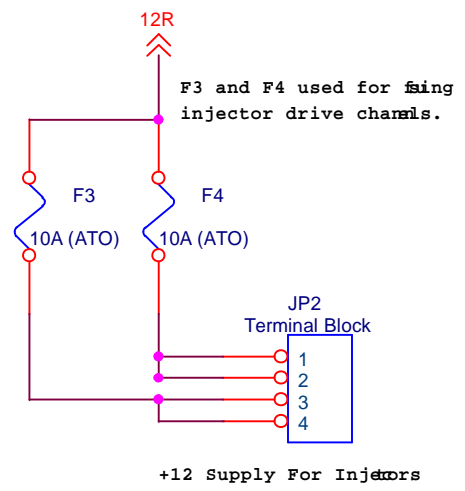

+12 Supply For Injectors

CB1-CB3 - Polyfuse circuitbreaker

Title		
MegaSquirt Power Distribution Board - Bowling & Grippo		
Size	Document Number	Rev
A	V1.2	1.2
Date:	Wednesday, May 01, 2002	Sheet 1 of 1

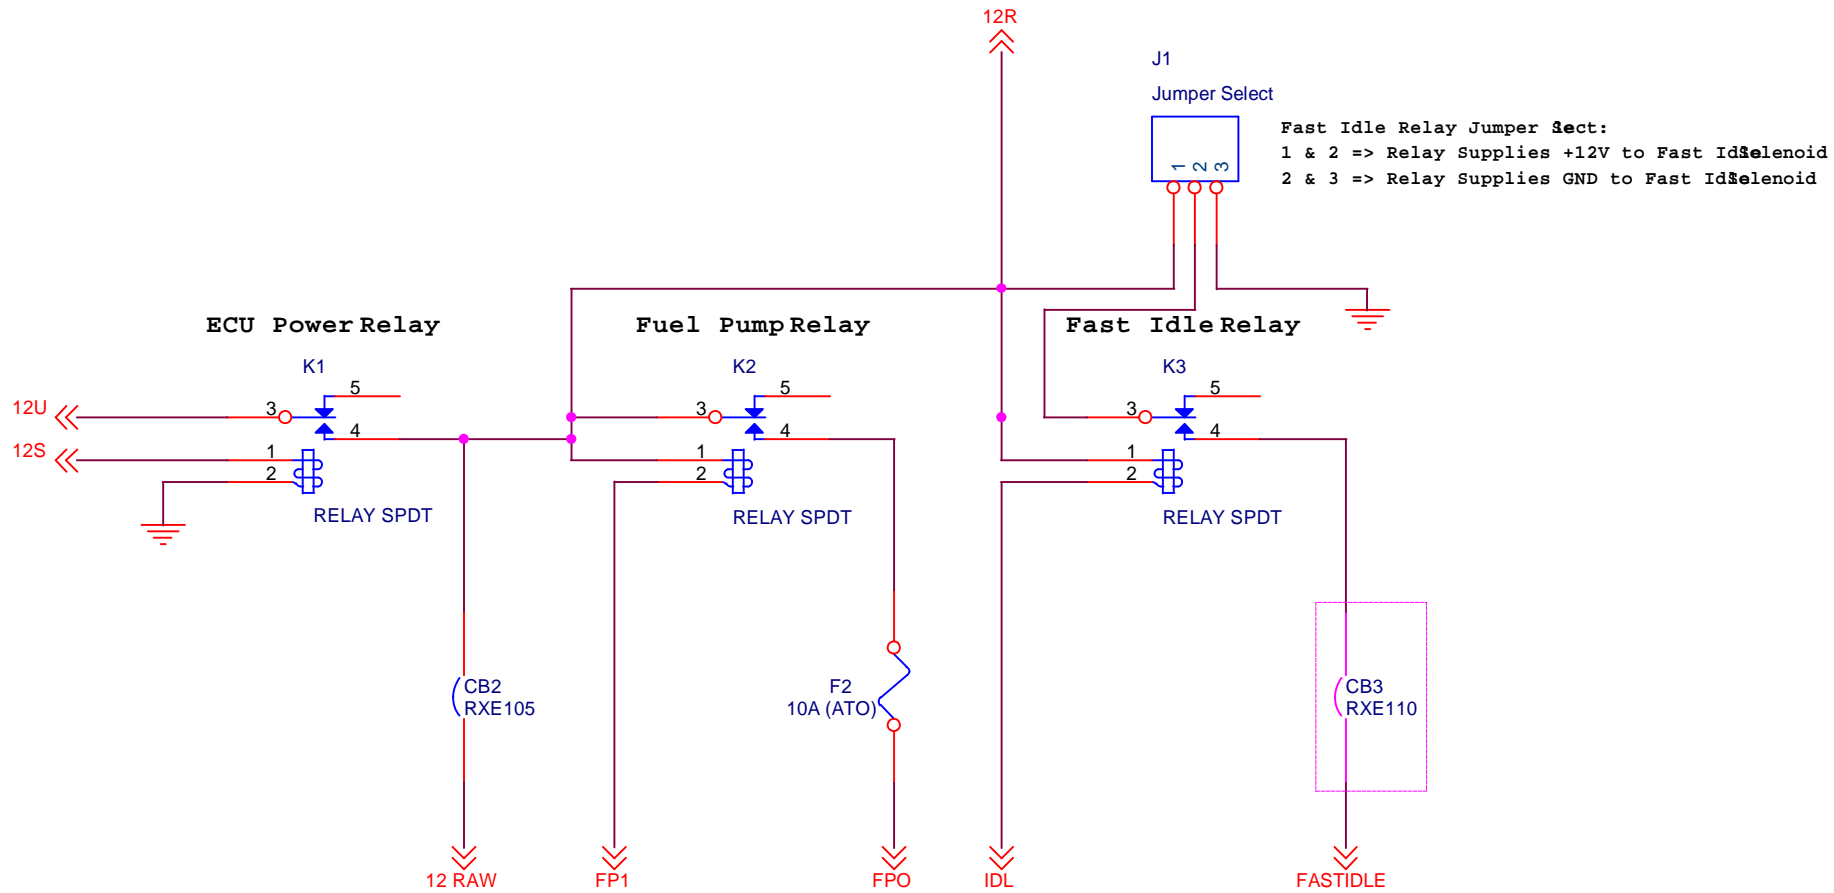

Title		
MegaSquirt Power Distribution Board - Bowling & Grippo		
Size	Document Number	Rev
A	V1.2	1.2
Date:	Wednesday, May 01, 2002	Sheet 1 of 1